



Installation Manual

www.velocitydetection.com Issue: 1.03

Date: 30/04/2019

CONTENTS

Contents	2
System Specification	3
Features	
Outstations	4
Compatible devices	4
Panel Dimensions	4
Mounting the Enclosure	5
Mains Wiring	5
Connecting the Mains Power	
LED's	6
Control Buttons	6
Menu Structure	7
General Operation	9
System normal screen	9
To make a call	9
To answer a call	9
Detecting faults	9
Buzzer / Speaker operation	10
Address Setting	10
Wiring Configuration	11
The Outstations	11
The Control Panel	12
The Addressable Bus Connection	12
The Addressable Bus Cable Checks	12
Control Panel Terminal Location	13
Appendix 1	14
The Installation	14
Cable Specification	
Technical Information	15
Fradaaura	15
EIICIUSUIE	15
rower supply Dower Supply Controller	15 1 F
Fower Suppry Controller Standby Battery Calculator	15
Standby Dattery Calculator	
Single Fault Relay Output Wiring	15
Normally Open Output – Parallel Wiring	15
Normally Closed Output – Series Wiring	15

SYSTEM SPECIFICATION

The Zeta Emergency Telephone System is designed to provide a secure means of communication to manage an emergency situation. Fire telephone systems range from small systems with a handful of outstations to large bespoke systems that incorporate refuge area call points for disabled occupants.

The control panel is normally located at the main entrance of a building for use primarily by the fire officer. The outstations are strategically positioned around the building for use by fire marshals or fire brigade personnel. Using the protected communication link, personnel can assess the emergency situation and implement appropriate action. This is particularly desirable in large buildings where an evacuation needs to be coordinated to prevent stairwells becoming overwhelmed.

The Zeta Emergency Telephone System has a fully addressable bus which can support up to 120 devices any combination of Jack Socket stations, Hands free stations and Telephone stations. Each station is given an address, when a station is in use it will automatically call the main control unit and can be easily identified on the panel display showing the address the call has originated from.

When a call is made from the control unit to one of the outstations, the extension LED will illuminate, and the internal speaker will ring (if fitted). The call is answered as soon as the handset is plugged into the socket or the button is pressed on the hands-free station.

It is also possible to make and receive calls from up to four stations at the same time.





FEATURES

- Easy to use outstations with simple operating instructions
- Password protected control panel with LCD screen
- Two way fault-monitored voice link with true full duplex speech
- All calls recorded with a playback facility
- Call log for calls made and received
- 24V DC low voltage power supply
- Battery backup with integral battery charger
- Visual and audible call indications
- With up to 120 addressable outstations connected to one control panel
- Up to 4 outstations can communicate with the control panel at the same time
- Outstations are wired using a 4 wire radial bus.
- Specialised fire-safety intercom system design
- Continuous fault monitoring

OUTSTATIONS

The system uses a 4-wire digital bus to power and communicate with up to 120 addressable outstations using the Zeta ETS Protocol.

Compatible devices

Device	Comment
ETS-CP/R	Control Panel c/w Red Telephone Handset
ETS-CP/W	Control Panel c/w White Telephone Handset
HF-OS	Type B Hands Free Intercom Outstation for Disabled Refuge use
TS-OS/R	Type A Telephone Outstation c/w Red Handset
TS-OS/W	Type A Telephone Outstation c/w White Handset
TS-OS/WP	Type A Telephone Outstation – Weatherproof Enclosure (IP66)
JS-OS	Jack Socket Outstation

PANEL DIMENSIONS

Enclosure Dimension:



MOUNTING THE ENCLOSURE

Check the build and condition of the wall to decide a suitable screw fixing. The mounting holes are designed for No 8 roundhead or countersunk woodscrews (or similar). Remove any debris from the enclosure. Take care not to damage the FACP during installation.

Fix the enclosure to the wall using all the mounting points and mounting hole dimensions provided: 4 x mounting points



MAINS WIRING

Recommendations

The Mains supply to the FACP is fixed wiring, using Fire resisting 3-core cable (Between 1 mm² and 2.5mm²), fed from an isolating double pole switch fused spur, and fused at 3A. IT SHOULD NOT BE CONNECTED THROUGH AN RCD. The supply must be exclusive to the ETS Panel. MAKE SURE ANY SPARE ENTRY HOLES ARE COVERED WITH THE GROMMETS PROVIDED. The cable should be fire resistant.

Connecting the Mains Power

The AC Live (L), Earth (E) and Neutral (N) connections are marked on the power supply cage. It is essential that the mains Earth cable is connected to the PSU's Earth terminal.



LED's

The panel indicators are a 24 x 6 backlit LCD screen and seven LEDs as follows:



Indicator Colour	Indicator Function on panel
Green	Power – Power supply is healthy
Amber	Power supply fault – mains or battery fail
Amber	Fault - Will light during any fault (common fault)
Amber	Mute – Will light when microphone is muted.
Red	Call – Will light when ringing and on call.
Amber	Full – Will light when record memory is Full
Green	Recording – Will light when call is recording
LCD	Shows location of calls and description of faults on system

CONTROL BUTTONS

This panel will use a 16-button keypad and handset hook sensor as follows:

Buttons	Use on Panel
0 – 9	Numeric keys to enter numbers
*	Star – Answer another call during a call
#	Hash – Reset button
ENT / PLAY	Enter – Confirm actions or Play messages
MUTE	Mute – to silence fault speaker and mute handset microphone
UP	Scroll UP to select menu function
DOWN	Scroll DOWN to select menu function / Display the Main Menu
Handset on Hook	Normal - LCD shows time and date
Lift Handset	Panel will request user password (2 2 2 2), then enter the address of the extension to call (0 0 1), then extension will ring and if answered red call LED will light, the call will end when the handset is on hook.

MENU STRACTURE

For menu access, press DOWN key.

MAIN MENU	SUB MENU	DESCRIPTION		
1: LED & LCD Test	-	Enter user password (2 2 2 2) and panel indicators will		
		flash 3 times and return to normal screen		
		Recording Full Call Mude Fault Power 1. LFD&LCD TEST . Recording Full Call Mude Fault Recording 2. RECORD SLMMARY . PLAYEACK RECORDING . FAULT SLMMARY 5. DELETE RECORDING . PASSWORD SETUP		
2: Record Summary	1: Total Record	View total number of recordings, number of devices in		
		fault and percentage of used memory		
		Recording Full Call Mule Fault Power Power 1. LED&LCD TEST Image: Constraint of the constraint of th		
	2: Call Log	Shows address of last 6 calls made or received.		
		Recording Full Call Mule Fault Power 1. LEDRLOD TEST		
3: Playback Recording	-	Select recording number to play		
		Perconding Full Call Mode Fault Power 1. LED&LOD TEST 2. Recording Fault Call Mode Fault Power 1. LED&LOD TEST 2. RECORD SUMMARY 3. PLAYBACK RECORDING 4. FAULT SUMMARY 5. DELETE RECORDING 6. PASSWORD SETUP		
4: Fault Summary	-	View devices reporting fault		
		Recording Full Call Mute Fault Power Support and Power 1. LED&LOD TEST . Recording Full Call Mute Fault Support and Power 1. LED&LOD TEST . Recording Full Call Mute Fault Support and Power 1. LED&LOD TEST . Recording Full Call Mute Fault Support and Power 1. LED&LOD TEST . Recording Full Call Mute Fault Support and Power 3. PLAYBACK RECORDING . DELETER RECORDING . PASSWORD SETUP 5. DELETER RECORDING . PASSWORD SETUP . . .		

5: Delete Recording	-	Enter engineer's password (3 3 3 3) and press reset to delete all recordings * Warning unrecoverable *	
		Recording Full Call Mute Fault Power 1. LED&LCD TEST 2. RECORD SUMMARY 3. PLAYBACK RECORDING 4. FAULT SUMMARY 5. DELETE RECORDING 6. PASSWORD SETUP	
6: Password Setup	1: User PW Setup	Enter engineer's password (3 3 3 3) and enter new user password then enter to confirm	
		Precording Full Call Mute Fault Support Power 1. LED&LCD TEST 2. RECORD SUMMARY 3. PLAYBACK RECORDING 4. FAULT SUMMARY 5. DELETER RECORDING 6. PASSWORD SETUP	
	2: Eng PW Setup	Enter engineer's password (3 3 3 3) and enter new engineers' password then enter to confirm	
7: Configure System	-	Enter engineer's password (3 3 3 3) and system will search for devices and display number of phones, hands free and sockets found.	
		Recording Full Call Mule Fault Support Ar Power 7. CONFIG SYSTEM 8. DEVICE SUMMARY 9. SET DATE&TIME 10. FACTORY RESET	
		Recording Full Call Mude Fault Support Fault Power Wait a few seconds! Search the phones Total Telephones: 000 Total Handset: 000 Total Sectors: 000 Press ENT/PLAY to show Bus contents	
8: Device Summary	- Press ENT for Bus Contents	Panel shows number of telephones, hands free and jack socket devices on system. Bus contents will show all device addresses on the system.	
		Recording Full Call Mute Fault Power 7. CONFIG SYSTEM Image: State S	

9: Set Date & Time Enter engineer's password (3 3 3 3) then enter new date and time, then return to menu. 7. CONFIG SYSTEM DEVICE SUMMARY SET DATE&TIME 10. FACTORY RESET Date:02/01/06 Time:06:43:17 10: Factory Reset Enter engineer's password (3 3 3 3) and press reset to confirm factory reset * Warning unrecoverable * 7. CONFIG SYSTEM Pls Press RESET 8. DEVICE SUMMARY Unrecoverable! SET DATE&TIME 10. FACTORY RESET

GENERAL OPERATION

System normal screen...

When the telephone handset is on hook the system, normal screen will display the Zeta Alarm Systems banner and the date and time.

To make a call...

To make a call to a device lift the handset and the system will request the user password (2 2 2 2), then the panel will request the address of extension to call (0 0 1) the extension will ring and if answered the red call LED will light, the call will end when the telephone handset is put back on the hook.

To answer a call...

The panel will ring, and the red call LED will light, to answer the call lift the handset the red call LED will still be lit during the call, the call will end when the telephone handset is put back on the hook. It is possible for the panel to talk to up to 4 outstations at the same time. Press '*' to answer another call. A missed call message on the screen will inform you of any unanswered calls and the address the call originated.

Detecting faults...

If faults are detected the amber fault indicator is illuminated accompanied with a fault tone from the speaker, pressing the mute button will stop the fault tone, the fault relay will operate. The Fault Summary will show details of faults on the system.

Fault	Description
Outstation Removed	If an outstation is removed or has failed, the device address is displayed, and panel will beep.
Multiple Outstation Faults	If there is a cable break the first device address will show on the screen and all missing devices will be listed in the fault summary.
Outstation Mic Fault	If a device has an internal microphone fault the message will show device address and MIC fault.
Outstation Speaker Fault	If a device has an internal speaker fault the message will show the device address and SPK fault.

NOTE: Power Faults are monitored with a separate Power Fault LED and Relay; the power faults do not light the FAULT LED or show in the fault summary menu option.

						-		
Tha aharaar	controllor	heard hear (ators bolow	ic a dacari	ntion for	the foulte	monitorodu
The charger	controller	DOALO DAS 0	ס בבוס וחמות	alors below	is a descri	DUIDENTOF	the faults.	monitorea:

Power Fault	Description
Green AC Power LED	The GREEN AC power LED will illuminate when the system is running on mains and extinguish when mains power has failed.
Green Battery Power LED	The GREEN battery LED will illuminate when the system is using battery power and extinguish when mains power is restored.
Amber Battery Fault	The AMBER battery LED will be lit if the Battery is Removed or has Low Battery Voltage.
Amber Charger Fault	The AMBER charger LED will be lit if the mains power has failed or the battery charger circuit is damaged.
Amber Battery Hi-Z	The AMBER battery HI-Z LED will be lit if the battery capacity falls below the recommended level to support the system during a mains fail event. This is common for old batteries and batteries used in high ambient temperatures.
Amber Blown Fuse	The AMBER blown fuse LED will illuminate if one or more of the output fuses are damaged or removed. Note: This LED does not monitor the mains input and battery fuses.

Buzzer / Speaker

- The panel will ring when the panel is called from an outstation.
- The fault tone will sound a short beep and can be silenced by pressing the mute button.
- The Mute LED will be illuminated when the microphone on the handset is muted.

Address Setting

The panel uses the standard binary style addressing using an 8-way DIP switch settings. Valid addresses are 000 to 119. Use switches 1 - 7 to set address, switch 8 is not used.



For example, a device with switches 1,3 and 6 set to ON (binary 1) and the rest OFF (binary 0) will be address (1 + 4 + 32) = 37.

WIRING CONFIGURATIONS

The Outstations

There are three types of outstation available these are:

	HF-OS Hands Free Disabled Refuge Unit
	JS-OS Jack Socket Unit
Image: Constraint of the second se	TS-OS/R Telephone Station
	JS-THS Telephone Handset for Jack Socket Unit

Drawing showing outstations connected to the main control panel.



The Control Panel

There are four voltage free relay outputs in the control panel these are:

- Power Fault
- operates when a power fault is present.
- General Fault .
- Call In
- operates when telephone system fault is present.
- operates when a call is received. -
- Call Out operates when a call is made to an outstation. _

The Addressable Bus Connections

The Addressable Bus is a four-wire system each wire is numbered 1 to 4 for easy identification. Use of a 4-core cable is recommended.

The Panel Bus connections are 1 to 1, 2 to 2, 3 to 3 and 4 to 4. Outstations have BUS IN and BUS OUT terminals for easy installation.



The Addressable Bus Cable Checks

The Bus cable wiring should be checked with a multi-meter **prior** to connection to control panel, the typical values measured should be as follows for each conductor: -

Earth Fault Checks Each wire to earth bar	-	>500 K Ohms (0.5 M Ohms)
Short Circuit Checks		
1 to 2	-	>500 K Ohms
1 to 3	-	>500 K Ohms
1 to 4	-	>500 K Ohms
2 to 3	-	>500 K Ohms
2 to 4	-	>500 K Ohms
3 to 4	-	>500 K Ohms

To make continuity measurements on a radial circuit, temporarily link wires 1 & 3 and 2 & 4 at the last device to take measurements at the panel between: -

1 to 3	-	<50 Ohms
2 to 4	-	<50 Ohms

! Remember to remove links to before connecting the bus wires to the control panel. Damage may result if links are not removed before the bus is powered up.

The measurements of each wire should be the same any significant differences may indicate a cable problem. Record measurements as a reference for future fault finding.

Control panel terminal location.



Telephone Jack Socket Terminals
The Hands-Free Outstation Terminals BUS Terminals 1-4 IN & OUT 8 Way DIP Switch to set device address

Appendix 1:

The Installation

Installation requirements should conform to the standards BS 5839 part 9.

The control panel should be located at a height comfortable for an average person to use the telephone and easily read information on the screen.

The outstations are strategically positioned around the building for use by fire marshals or fire brigade personnel, for disabled refuge units ensure they have clear instructions and can easily be used by wheelchair users or visually impaired persons.

Do not use hands free intercom style units in areas where noise levels will impair their performance, e.g. from fire alarm sounders fitted in the area, or from traffic noise etc.

The system should be regularly tested for correct operation at regular intervals in line with the fire detection system.

Cable Specifications

The system uses a 4 core cable to connect outstations,. Screened cables should be used throughout the installation to help shield the panel from outside interference and ensure maximum EMC immunity. The use of a fire resistant rated cable is recommended.

There are two categories of cable according to BS5839: Pt1: 2002, Clause 26 "Fire Detection and Alarm Systems for Buildings (Code of Practice for System Design, Installation and Servicing)" and they are:

- Standard fire resisting cable to PH30 classification of EN 50200
- Enhanced fire resisting cable to PH120 classification of EN 50200

(Note that all cables should be a minimum of 1mm2 cross section)

With an addressable system, some care must be taken when calculating the appropriate cable gauge for the system. The main limitation is the voltage drop due to cable resistance under load, as this can cause interference and loss of data signal. The cable should be segregated from data cables and mains power cables to maximise speech quality.

The exact calculation equations are beyond the scope of this manual, because of the distributed load of the devices on the bus, guide the maximum cable length should be no more than:

- 1.0mm CSA = 1Km (1000m)
- 1.5mm CSA = 1Km (1000m)

Technical Information

Enclosure:					
	MATERIAL	-	Steel		
	DIMENSIONS	-	665 (H) x 535 (W) x 150 (D)		
	WEIGHT	-	15 Kg		
Power Supply:					
	INPUT VOLTAGE	-	Mains Supply Voltage 230V AC		
	INPUT VOLTAGE RANGE	-	88~264 V AC 47~63 Hz		
	AC INPUT CURRENT	-	1.2A @ 230 V AC		
	DC OUTPUT VOLTAGE	-	29.5V DC +/- 1% Factory Set		
	OUTPUT POWER	-	75W, 2.5A @ 30V		
	DC VOLTAGE RANGE	-	27 – 33V		
Powe	r Supply Controller:				
	OUTPUT FUSES	-	2xT2.5A (5x20mm) Anti-Surge		
	BATTERY BACKUP (24V)	-	2x12V Batteries in Series		
	BATTERY TYPE	-	Sealed Lead Acid 12V 3.4 Ah		
	BATTERY FUSE	-	5 Amp Fast blow (F5A - 5x20mm)		
	BATTERY IMP. LEVEL	-	2.0 Ohms Maximum		
	BATTERY DISCONNECT V	-	20.5 Volts @ Battery, 19V @ PSU		
Stanc	lby Battery Calculator				
	ETS PANEL	-	82mA (Standby) 120 mA (In Use)		
	TELEPHONE OUTSTATION	-	1.0mA (Standby) 4.7mA (In Use)		
	HANDS FREE OUTSTATION	-	1.1mA (Standby) 4.2mA (In Use)		
	JACK SOCKET OUTSTATION	-	1.0mA (Standby) 4.2mA (In Use)		

In order to calculate the standby battery size, the following formula can be used: -

Battery Ah = 1.25 x [(TALM x IALM) + (TSBY x (IQP+ IQZ))]

Where:

TALM	= Time in hours for the system to be in use [typically ½ hour]
IALM	= Total Current in amps for 4 active devices.
TSBY	= Standby time in hours after mains failure [24, 48 or 72 hr]
IQP	= Standby current in amps of control panel during mains failure
IQZ	= Total Standby current in amps of all devices on the system.

Typical Example: A control panel with 10 outstations require a 24 hour backup and additional 0.5 hour duration of in use, the battery size required would be:-

TALM = 0.5Hrs, IALM = 0.12A, TSBY = 24Hrs, IQP = 0.082A, IQZ = 10 x 0.0011=A

Battery Size:

= 1.25 x (0.5 x 0.12) + (24 x (0.082+0.011)) = 1.25 x 0.06 + 2.232 = 1.25 x 2.292 = 2.87Ah

The calculation includes a battery de-rating factor to allow for a reduction in battery performance as the batteries age. The recommended battery size would be 3.0Ah; the closest available battery size is 3.4Ah.

Single Fault Relay Output Wiring

Normally Open Output – Parallel Wiring

- Link the common contact of the fault relay to the common contact of the power fault relay and this is the common output wire to the auxiliary equipment.
- Link the normally open contact of the fault relay to the normally open of the power fault relay and this is the normally open output wire to the auxiliary equipment.

Normally Closed Output – Series Wiring

- Link the common contact of the fault relay to the normally closed contact of the power fault relay.
- The common contact of the power fault relay is the common output wire to the auxiliary equipment.
- The normally closed contact of the fault relay is the normally closed output wire to the auxiliary equipment.

DOCUMENT MODIFICATION HISTORY

Version	Date	Changes	
V1.00	20.07.2017	First Draft	
V1.01	04.02.2019	Change to DIN PSU	
V1.02	29.04.2019	Change to Velocity MMP10 box	
V1.03	30.04.2019	Document format and Illustration update	
		Added: (Panel Dimension, Enclosure mounting and Mains wiring)	